

Steps for Replacing the Cover of the MD VT F



Start by placing the cover onto the top of the MD VT F, and begin to pull the cover over the rounded back end. Don't pull it all the way down, though.



Go to the opposite side of the target and line up the seam of the cover with the edges of the foam target. Slowly pull one side (left or right) down first, and then go to the opposite side and pull the cover down. Try to keep the progression of the cover the same on both sides.



Go to the rounded part of the target and repeat Step 2, slowly inching the cover down over each side of the target.



When the cover is secured over the target, flip it over and begin putting the bottom half of the cover on the foam tire blocks.

Steps for Replacing the Cover of the MD VT F




Be sure to pull the cover tight around the inside of both tire blocks.



When the cover is secured over the tire blocks, pull the bottom cover over the foam and secure the Velcro of the top cover to the Velcro on the bottom cover. Pull the bottom tight and secure the covers all the way along the seam (above).



Move to the side of the target and secure the flaps on the top cover to the Velcro on the tire block covers. Pull tight, to make sure the cover aligns properly. Repeat this step on the other side of the target, for the second tire block.

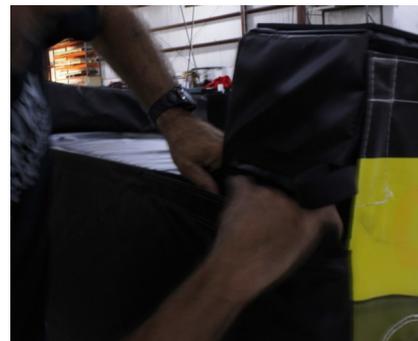

Move to the back of the target and secure the last section of the covers together.

Steps for Replacing the Cover of the MD VT F



When the cover is secured on the target, you can attach the removable base block to the Velcro section on the underside of the target. Start by lining up one end of the block with the permanent tire block, and then line up the other end of the block on the opposite side.



Use the guidelines on the bottom cover to line up the second block, which will be attached using strong adhesive/glue. Line up the block so that the Solflex pads are facing out (shown above).



Your target is ready to use!